

How to pair remote with receiver

1. Please press the confirm button and return button for about 3 seconds, (Figure 1)

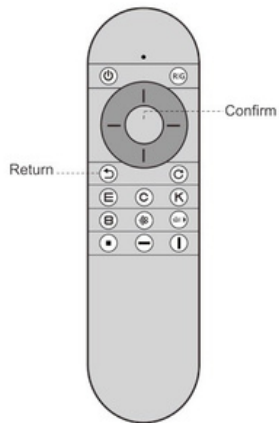


Figure 1

2. After the Signal light blinking (Figure 2), insert the remote receiver into the Elite.

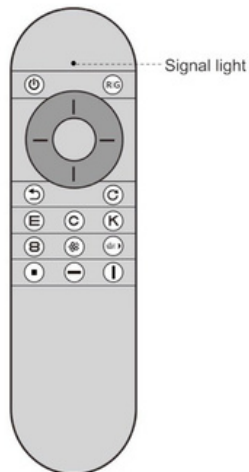


Figure 2

With above operation, the remote and receiver is paired.

